

How to install qs-STAT freeware



Go to VELUX.com



Contact Press Jobs Publications

VELUX Group Sustainable Living Daylight Products

Company facts · Corporate Responsibility · VELUX Quality · Sponsorships · **Procurement**

Procurement



- Selling to VELUX
- Purchasing principles
- Quality requirements
- Capability study



Selling to VELUX

You can see, at a glance, whether you can supply the goods, materials or services we require. We welcome enquiries from suppliers from all over the world.

> [Goods, materials and services we buy](#)

Purchasing principles

We seek mutually beneficial relationships with our suppliers based on clear and consistent purchasing principles.

> [Read our purchasing principles](#)

Quality requirements

We want to work towards zero defects and it is our belief that quality of raw materials is best secured at our suppliers.

> [VELUX General Quality requirements](#)

Capability study

If you are a preferred VELUX partner you can analyse your own quality data and receive a capability report.

> [Capability study](#)

How to install qs-STAT freeware



Contact Press Jobs Publications

VELUX Group Sustainable Living Daylight Products

Company facts · Corporate Responsibility · VELUX Quality · Sponsorships · **Procurement**

Capability study



Selling to VELUX

Purchasing principles

Quality requirements

Capability study

If you are a preferred VELUX partner you can analyse your own quality data and receive a capability report.

This tool is intended for suppliers who want to make capability studies their own processes. The analysis can be used either to approve or reject own processes or used as finished goods inspection before parts are supplied to the VELUX companies.

Basic analysis and standard reports (freeware)

Upload data via the website to analyse data for batch, tools or machine approval and create a capability report.

Manuals

Guides how to install and use qs-STAT (freeware).

> [How to install qs-STAT](#)

> [How to use qs-STAT](#)

1. Download:
Download the zip file, unzip it and install the freeware program.
> [Download qs-STAT freeware](#)

2. Sample analysis:
Get user name and password from the contact persons below.
> [Upload & analyse data](#)

Contact

For support please contact:

Henning Nielsen

Tel. +45 21 57 81 05

E-mail: henning.nielsen@velux.com

Ellen Winther


Tel. +45 20 12 49 33

E-mail: ellen.winther@velux.com

Niels Jørgen Jensen

Tel. +45 23 31 71 79


E-mail: nj.jensen@velux.com

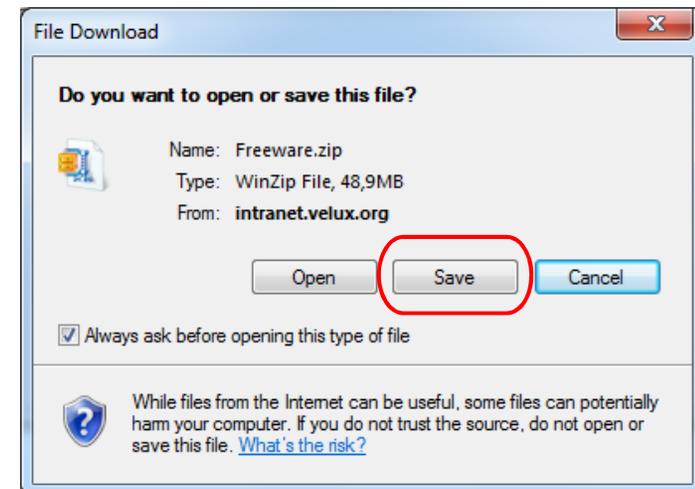

How to install qs-STAT freeware

Download Version

- Extract the .zip File into a separate directory and execute **STARTCD.exe**.
- Click on „Start FREEWARE“.
- The setup will copy required files into the temporary folder: C:\Documents and settings\USER\local settings\Temp
- After that the program starts automatically. If you want to run it again, the extracted files have to present be in originally folder/directory.
- Create a shortcut. Right click on “STARTCD.exe”, send to and then create shortcut.

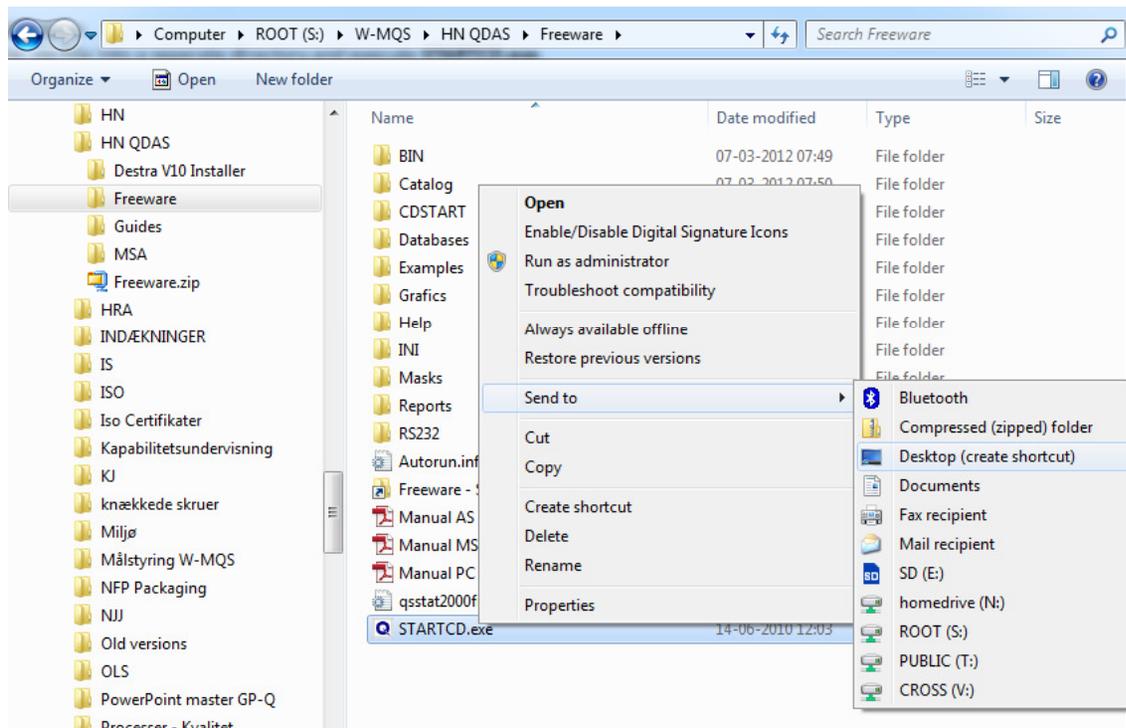

There may be differences between your PCs, and therefore the above installation instructions are not always correct.

Sometimes all files in the folder must be highlighted and then right click and select “extract all”.

If problem remains unsolved please contact the VELUX.

How to install qs-STAT freeware



For support please contact:

Henning Nielsen: +45 21 57 81 05; henning.nielsen@velux.com

Ellen Winther: +45 20 12 49 33; ellen.winther@velux.com

Niels Jørgen Jensen: +45 23 31 71 79; nj.jensen@velux.com